

WARNINGS:

- This product must be installed in accordance with applicable electrical and installation codes by a person familiar with the construction and operation of the product and hazards involved.
- Proper grounding is required to insure personal safety.
- All work should be performed by a qualified electrician.
- **Ensure power is OFF before starting installation or attempting any maintenance.**

1. Disconnect Power

- Disconnect power before installation or maintenance.

2. Mounting of Luminaire

- Orient the junction box with the closed end (slotted) towards the heavy side of the ballast housing.
- Slide junction box onto ballast housing and secure as shown.
- Loosen screws to mounting adapter and slide plate until fixture hangs plumb.
- Tighten both screws to secure mounting adapter.
- Thread on 3/4" safety hook and hang fixture from an approved suspension system or attach to rigid conduit.

3. Attach Polycarbonate Reflector

- Spin reflector assembly onto housing.

4. Attach Inner Reflector

- Loosen the two inner reflector screws.
- Align spacer on inner reflector keyhole slots with screws, rotate, and tighten screws to secure.

5. Electrical Connections

- Multiple voltages wires may be present—ensure correct lead is used.
- Connect power supply voltage lead to fixture voltage lead as marked.
- Connect neutral supply lead to fixture lead marked COM
- Connect fixture ground lead (green, green tracer, predominantly green) to suitable ground.
- Cap all unused leads.


6. Install Lamp Lamps must be OPEN RATED

7. Distribution Adjustment Setting

- If a lighting layout has been preformed for your facility, note the recommended adjustment indices. General distribution settings may be found in the table to the right.
- Match the top of adjustment ring to the bottom line of the in-box as shown in the figures at the right (Shown set at N2)
- Assure wing nut is aligned with adjustment housing slots; tighten to secure reflector assembly.

GENERAL:

- Ballast assembly is shipped separately from the reflector components.
- Thoroughly inspect shipment for freight damage and notify carrier as needed.
- Verify the catalog description listed on the packing slip with the fixture and component labels.
- Contact manufacture before making any fixture alterations or for additional information as needed.

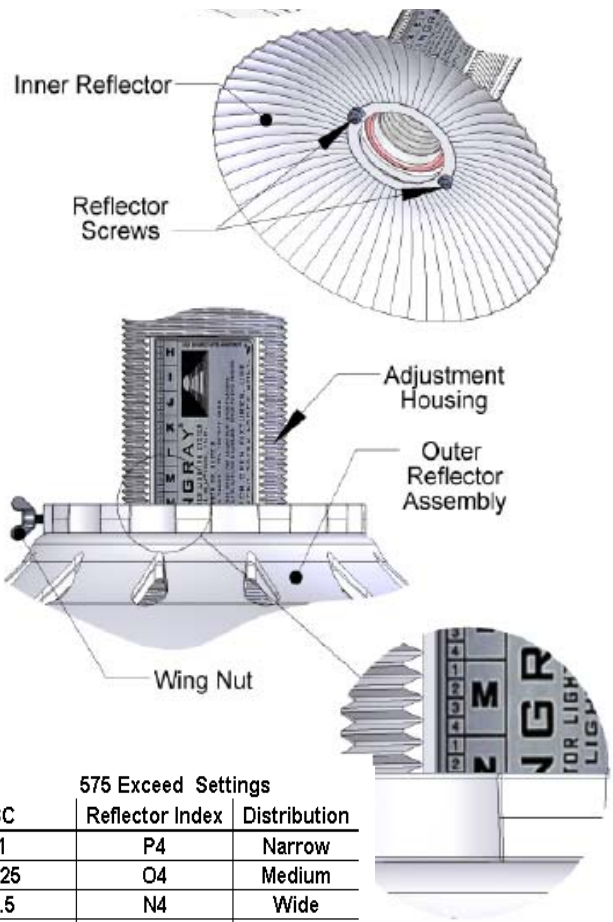

575 Exceed Settings		
SC	Reflector Index	Distribution
1	P4	Narrow
1.25	O4	Medium
1.5	N4	Wide
1.8	L3	X-Wide